

1. Install Voxeldance Tango


The ELEGOO Voxeldance Tango software installation package is stored in the U Disk, and you can also download the latest version from www.elegoo.com/download; select the correct version and install it on your computer.

Activate Voxeldance Tango

2.1 After installing the software, double-click to open the ELEGOO Voxeldance Tango software, and select "Activate your license" in the pop-up window (See Picture 1)


2.2 After selecting "Activate your license", a new window will pop up, click "Activate" in "Activate with hardware code" under "License *" in the new window (See Picture 2)

2.3 Enter the printer's 10-digit hardware code (see point 3) in the input field below "Printer hardware code" in the window, and fill in other information as prompted to complete the software activation. (See Picture 3)

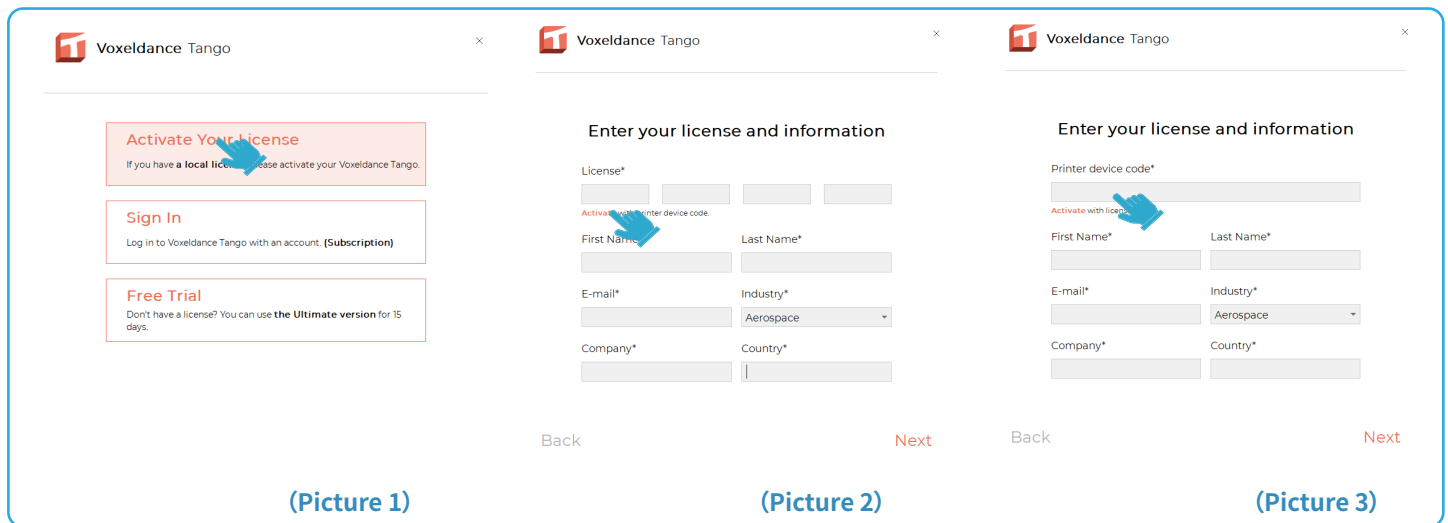

3. How to get the printer hardware code

Open the machine packaging accessory box, and find the ELEGOO Voxeldance Tango activation card. The front of the card is the ELEGOO Voxeldance Tango product logo, and a string of codes will be found in the middle of the back, which is the "printer hardware code". (See Picture 4)

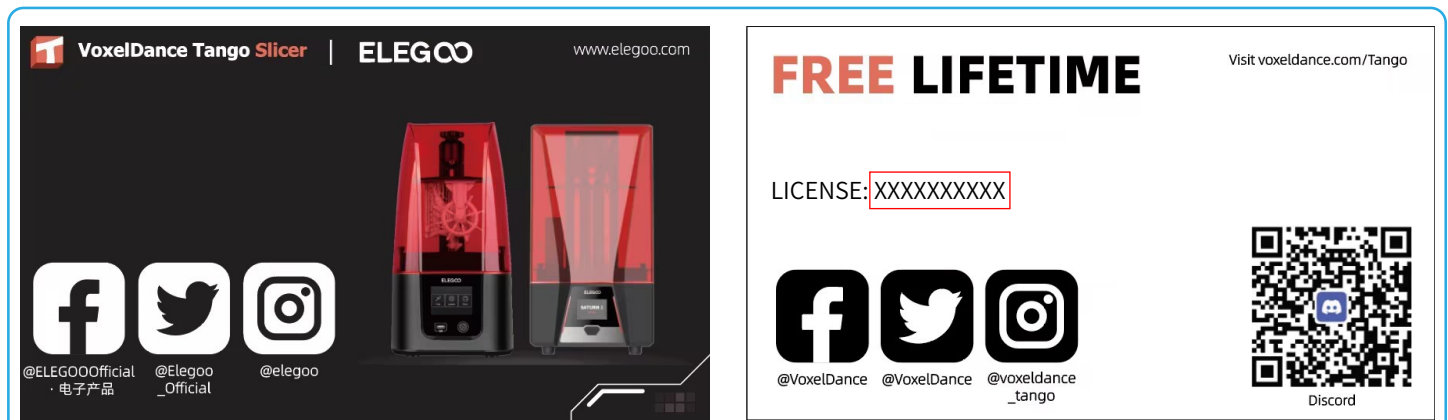

(Picture 4)