

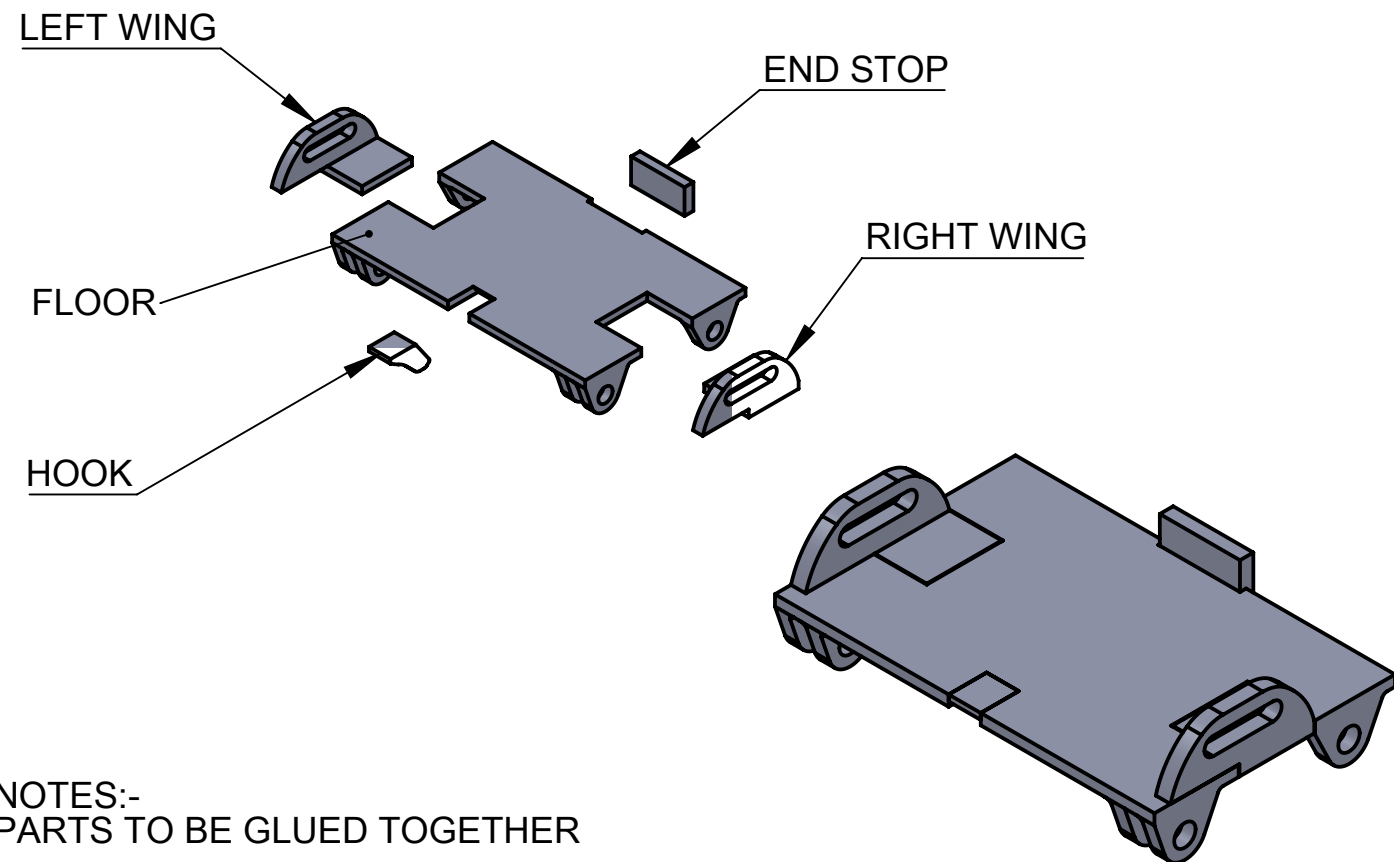


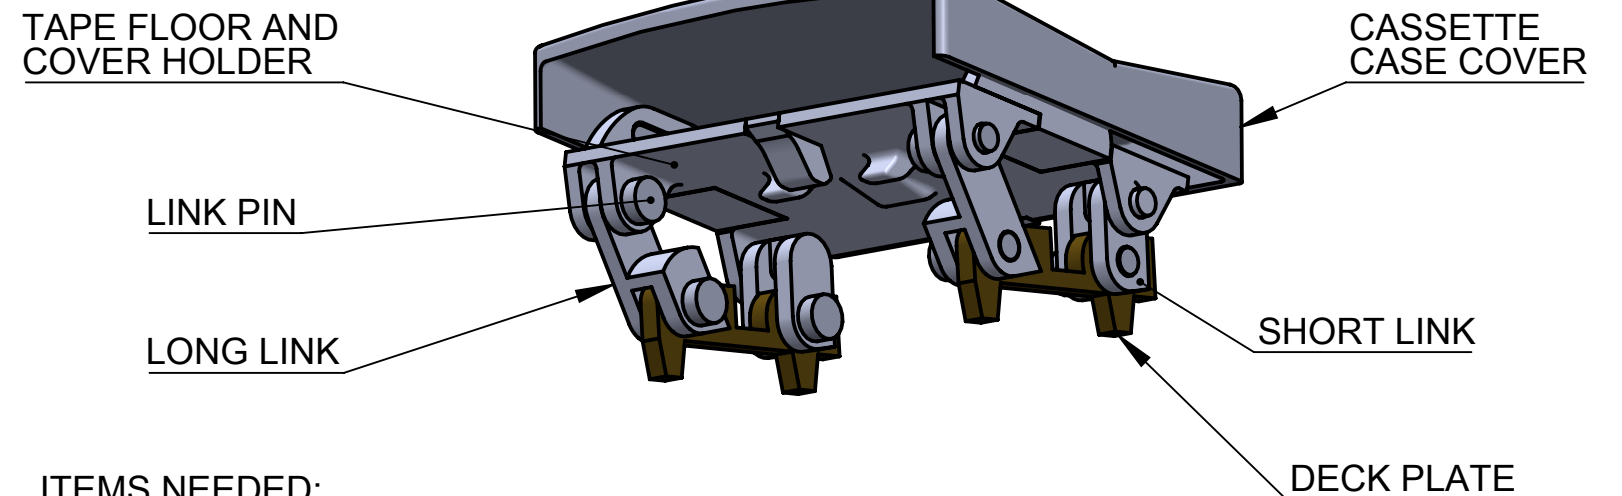

NOTES:-
PARTS TO BE GLUED TOGETHER

NOTES:
RUBBER BAND TO BE LOOPED AROUND FRONT HOOK THROUGH REAR LOOP AND ATTACHED TO HOOK ON UNDERNEATH OF TAPE FLOOR. DOUBLING OF THE BAND MAY BE NECESSARY.

SLINDING HOOK TO BE GLUED TOGETHER THEN INSERTED WITH SPRING INTO SLOT

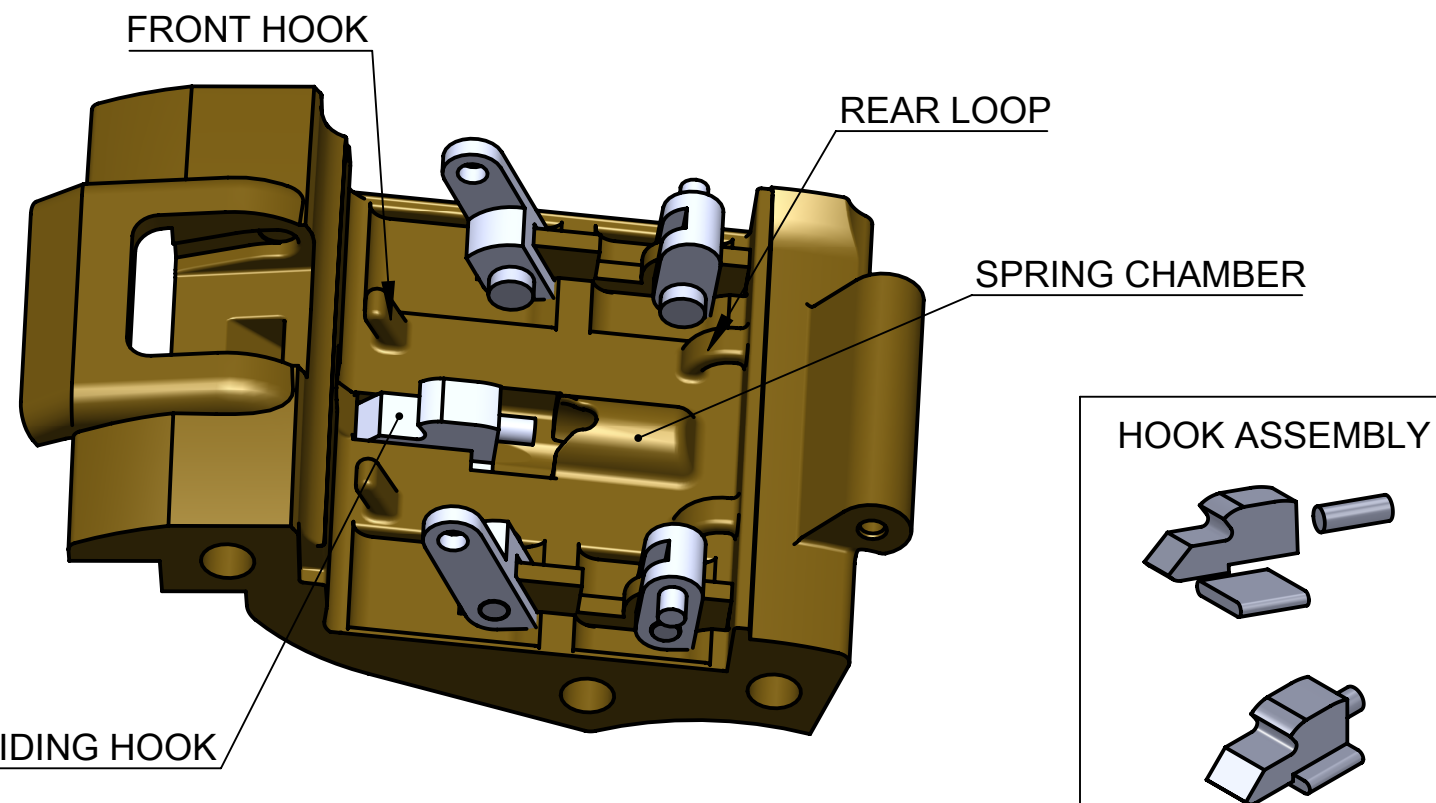

ITEMS NEEDED;
1 OFF - CASSETTE COVER
1 OFF - TAPE FLOOR AND COVER HOLDER
2 OFF - DECK PLATE
2 OFF - LONG LINK
2 OFF - SHORT LINK
6 OFF - FRONT LINK PIN

NOTES:-
SANDING MAY BE REQUIRED TO ENSURE ALL SLIDING/ROTATING PARTS MOVE FREELY

ASSEMBLY SUMMARY

1. PRE CHECK FIT ON ALL PARTS AS SHOWN IN ABOVE
2. GLUE DECK PLATES INTO PIPBOY BODY AND ASSEMBLE AND GLUE HOOK AND TAPE FLOOR PARTS
3. INSERT LINKS AND PINS AS SHOWN IN LEFT IMAGE
4. INSERT RUBBER BANDS READY FOR ATTACHMENT TO TAPE FLOOR
5. ATTACH TAPE FLOOR TO REAR LINKS AND ATTACH RUBBER BAND TO TAPE FLOOR HOOKS
6. ATTACH FRONT CLEVIS'S OF TAPE FLOOR TO FRONT LINKS
7. ATTACH CASSETTE COVER TO TAPE FLOOR
8. INSERT PUSHROD INTO THROUGH SLOT AND THEN INSERT RELEASE BUTTON

RUBBER BANDS SIZE NOT STATED AS SIZE AND TENSION CAN VARY BUT INSURE THERES ENOUGHTENSION BANDS TO OPEN THE TAPE FLOOR WHEN COVER IS DEPRESSED.

HOOK RELEAE SPRING - DIAMETER TO BE 8mm. LENGTH 30-40mm, 0.5-0.75mmAPPROX WIRE SPRING FORCE CAN BE VARIED BY THE USER USING THIS INFORMATION.